
SINGERS CHOICE USA

AVR9502

Karaoke Audio Receiver

Owner's Manual

Rated output power **750 W × 2**

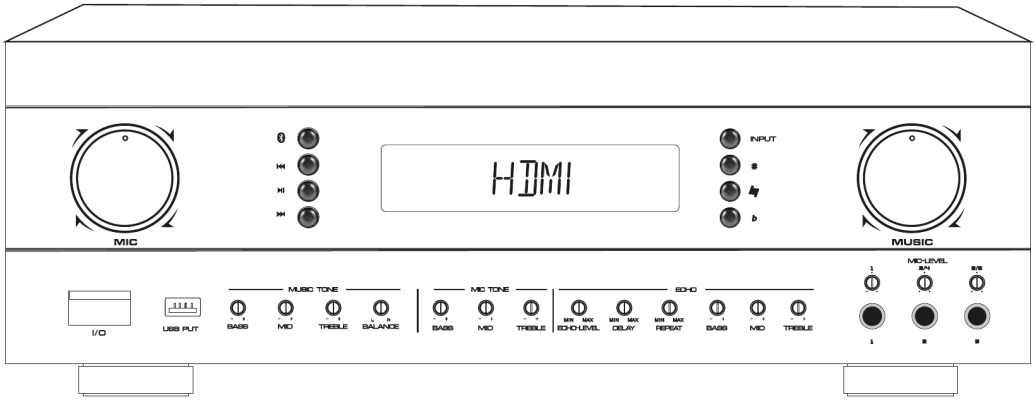

Suitable for home karaoke, entertainment and private rooms, multi-function halls, banquet halls, conference rooms, classrooms, retail stores and other venues.

Specifications are subject to change without notice.

singerschoiceusa.com


AVR9502 · BEFORE YOU BEGIN

Important Safety Instructions

1. Read these instructions, keep them, and heed all warnings.
2. Follow all instructions. Do not use this apparatus near water.
3. Clean only with a dry cloth. Do not block any ventilation openings.
4. Do not install near any heat source such as radiators, heat registers, stoves or other apparatus that produce heat.
5. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades, one wider than the other; a grounding-type plug has two blades and a grounding prong. The wide blade or the grounding prong is provided for your safety. If the provided plug does not fit your outlet, consult an electrician to replace the outlet.
6. Protect the power cord from being walked on or pinched, particularly at the plug, convenience receptacles, and the point where it exits the apparatus.
7. Only use attachments and accessories specified by the manufacturer.
8. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus.
9. When a cart is used, take care when moving the cart and apparatus together to avoid injury from tip-over.
10. Unplug the apparatus during lightning storms or when it is unused for long periods of time.
11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way — for example, the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, it has been exposed to rain or moisture, it does not operate normally, or it has been dropped.
12. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
13. **WARNING:** This apparatus must be connected to a grounded (earthed) power outlet.
14. Do not expose the apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.
15. The mains plug is used as the disconnect device and must remain readily operable.
16. To avoid electric shock, do not open the apparatus. There are no user-serviceable parts inside; refer servicing to qualified personnel.
17. To disconnect the apparatus completely from the AC mains, pull the power plug out of the AC outlet. Re-insert the plug to restore power.
18. This apparatus is designed and evaluated for safe use at altitudes of 2,000 m (6,560 ft) or below. Use above 2,000 m may present a safety hazard.
19. This apparatus is designed and evaluated for non-tropical climates only. Use in tropical climates may present a safety hazard.

AVR9502 · FRONT PANEL


Front Panel Guide

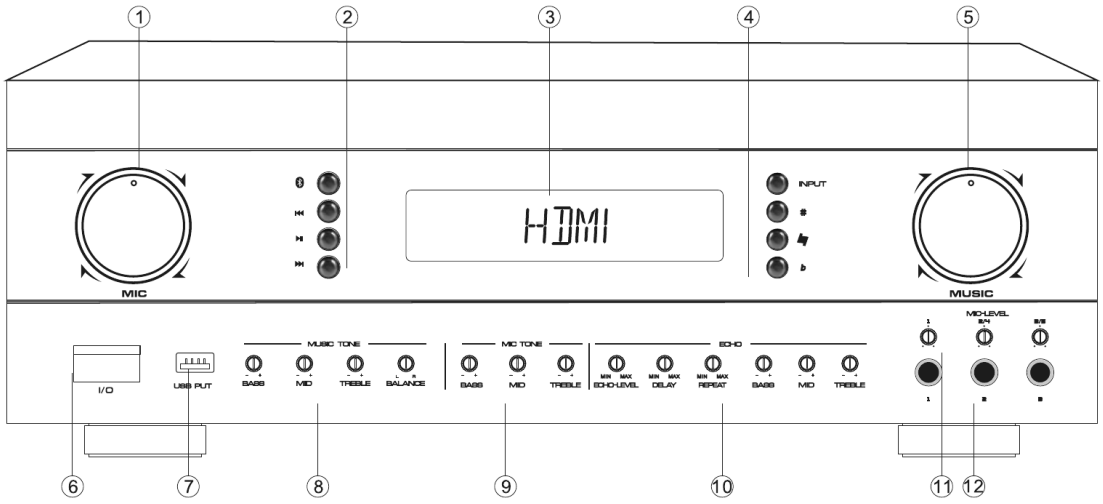

NO.	NAME	FUNCTION
1	**Master MIC volume**	Knob that sets the overall microphone volume.
2	**Media keys**	Bluetooth key: press to select the audio source — Bluetooth (BLUE), USB, OPT (optical) or COX (coaxial). Playback keys: previous track, play/pause, next track.
3	**Display**	Shows the operating status of the receiver.
4	**Input select & music key control**	Press INPUT to choose the audio input. 11-step key (pitch) control: ♯ raises the key, ♮ returns to the original key, ♭ lowers the key.
5	**Master MUSIC volume**	Knob that sets the overall music volume.
6	**Power switch**	Press to switch the unit on; press again to switch it off.
7	**Front USB port**	USB 2.0 — plug in a USB drive for instant music playback.
8	**Music tone controls**	BASS (low), MID (midrange), TREBLE (high) and BALANCE (left/right).
9	**Microphone tone controls**	BASS (low), MID (midrange) and TREBLE (high) for the microphones.
10	**Echo controls**	ECHO-LEVEL: overall echo level · DELAY: echo time · REPEAT: number of echo repeats · BASS / MID / TREBLE: echo tone.
11	**Microphone level controls**	1: volume of mic input 1 · 2/4: volume of mic inputs 2 and 4 · 3/5: volume of mic inputs 3 and 5.
12	**Microphone inputs**	Mic input jacks 1, 2 and 3.

AVR9502 · REAR PANEL

Rear Panel Guide

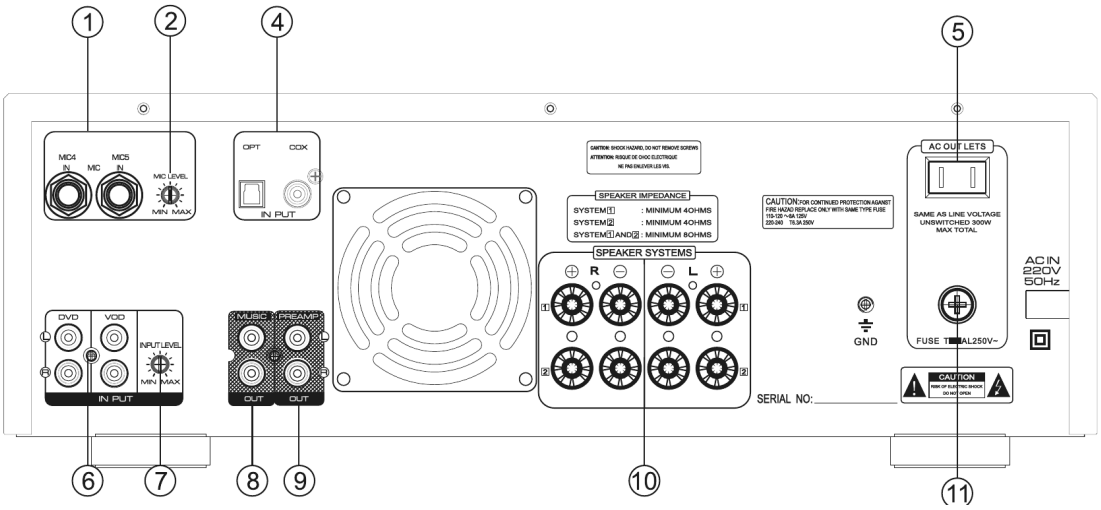

NO.	NAME	FUNCTION
1	**MIC 4 / MIC 5 IN**	Microphone input jacks 4 and 5.
2	**MIC LEVEL**	Input gain knob for the rear microphone inputs.
4	**OPT / COX**	Optical and coaxial digital audio inputs.
5	**AC OUTLETS**	AC power outlet for other equipment. The total connected load must not exceed 300 W.
6	**DVD / VOD**	Audio inputs for a DVD player and a VOD (karaoke song) player.
7	**INPUT LEVEL**	Input gain knob for the audio inputs.
8	**MUSIC OUT**	Music signal output.
9	**PREAMP OUT**	Pre-amplifier line output (for an external power amplifier or powered speakers).
10	**SPEAKER SYSTEMS**	Speaker terminals. Observe the impedance label on the rear panel: System I or System II — minimum 4 Ω each; Systems I and II together — minimum 8 Ω.
11	**Fuse**	Mains fuse holder. Replace only with a fuse of the same type and rating.

Specifications

ITEM	VALUE
Rated output power	750 W × 2
Type	Karaoke audio receiver

Specifications are subject to change without notice.